Assembly Instructions

ITEM#: WF289330AAC / WF289330AAE

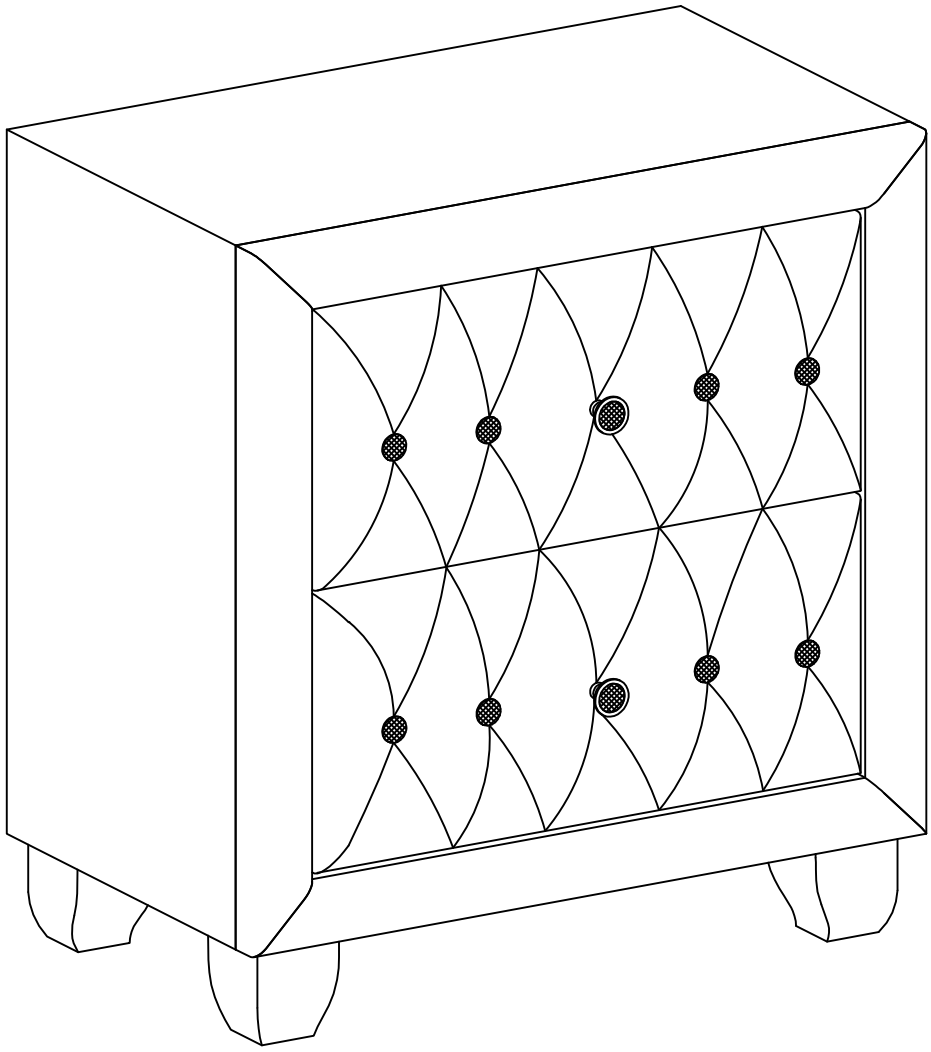

Assembly Instructions

ITEM#: WF289330AAC / WF289330AAE

PARTS LIST

NO	DECS	PHOTO	Q'TY
A	Upholstery Nightstand	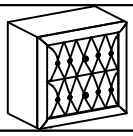	1 pc
B	Legs		4 pcs

HARDWARE LIST

NO	DECS	PHOTO	Q'TY
1	Long Bolts Ø5/16" x 100mm		4 pcs
2	Spring Washer Ø5/16"		4 pcs
3	Flats Washer Ø5/16"		4 pcs
4	Allen Key 4mm		1 pc

Read this instruction carefully. See hardware and furniture part list for guidance.
Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched.
Follow the figure to start assembling.
CAUTIONS :

1. **Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembled.**
2. **Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread.**
3. **Keep all hardware parts out of reach of children.**

NOTE : THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

Step 1

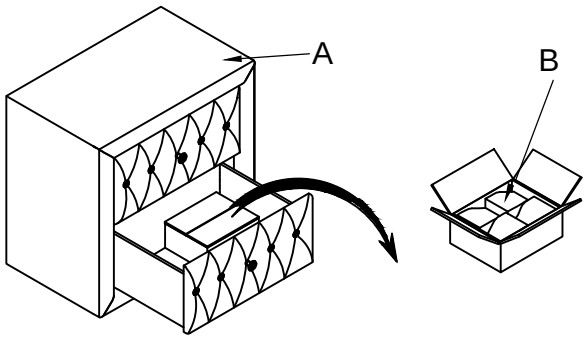
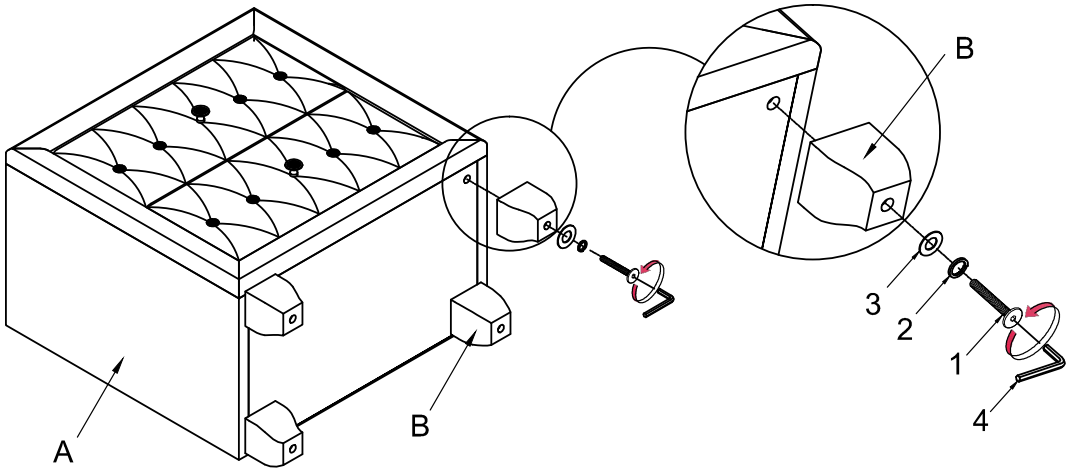
Step 2