


ASSEMBLY INSTRUCTION

WF194756/WF194757




PARTS LIST


BOX 1:

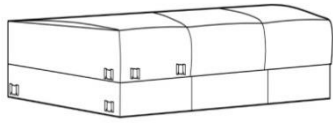


(A): 1 PC

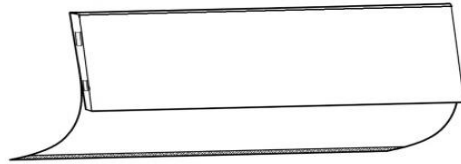


(B): 1 PC




(K): 1 PC

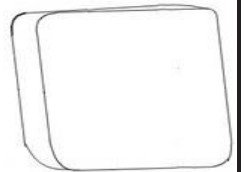

(O): 2 PCS

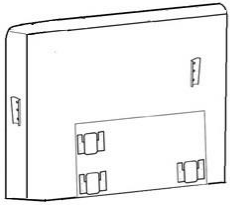

(C): 1PCS

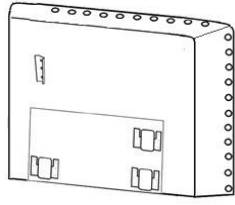


(D): 1 PC



(E): 4 PCS



(F): 4 PCS

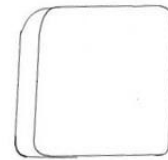


(M): 1 PC




(N): 1 PC

BOX 2:

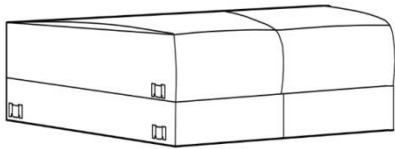

(H): 1PC

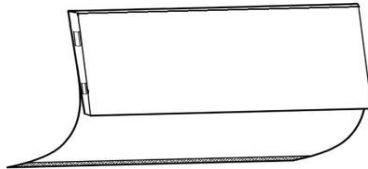


(I): 1 PC



(O): 2 PCS



(L): 1 PC

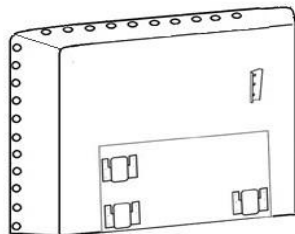


(J): 1 PC



(E): 7 PCS






(F): 7 PCS


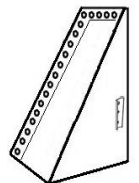


(G): 1 PC


STEP 11 - PUT THE SOFAS TOGETHER BY CONNECTING CONNECTOR BRACKETS

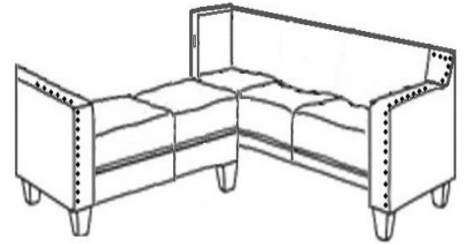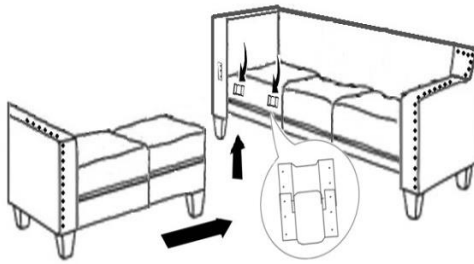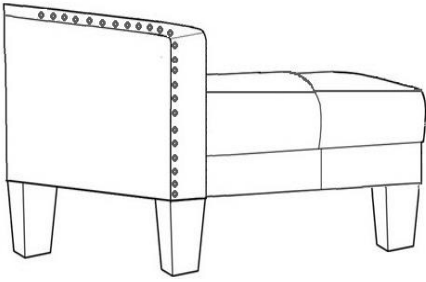



STEP 13 - MOUNT BACK INTO THE SEAT FRAME

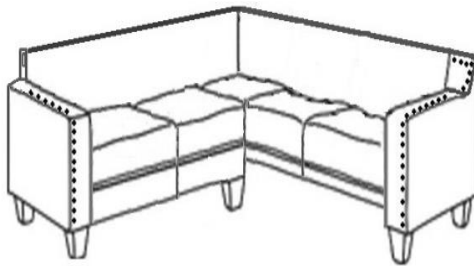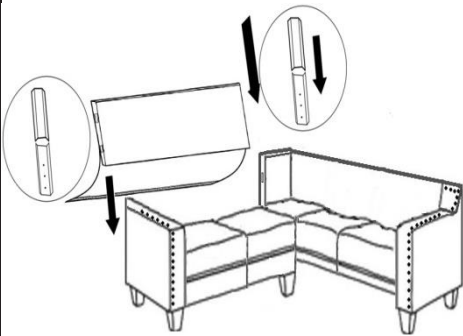


STEP 15 - INSERT LEGS

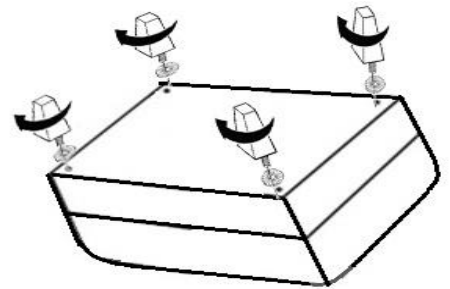

STEP 18 - MOUNT ***** ON THE ARM CHAIR

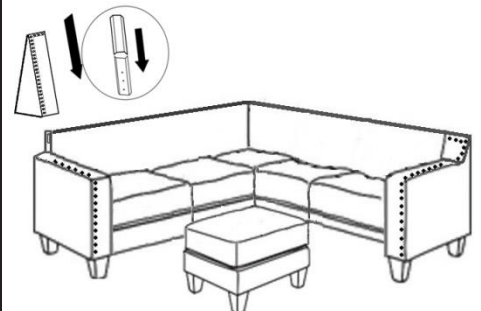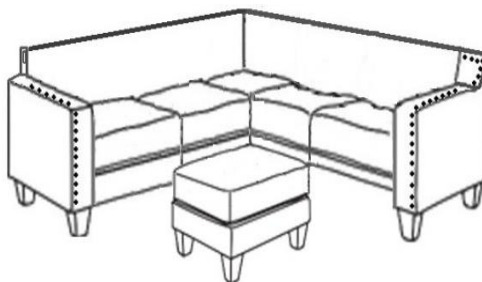

STEP 19 - PUT THE SOFAS TOGETHER BY CONNECTING CONNECTOR BRACKETS

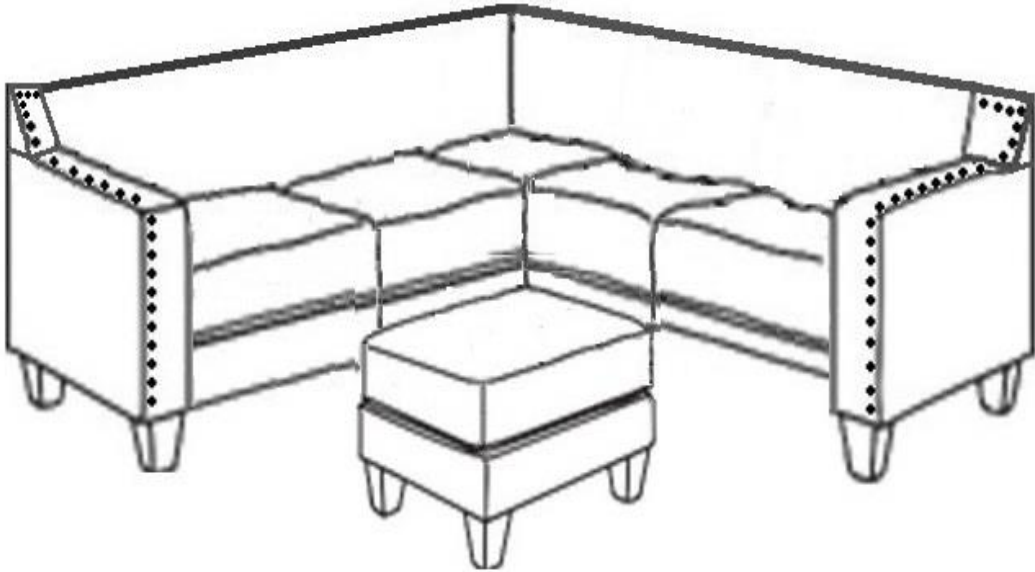

STEP 20 - PUT THE SOFA TOGETHER BY CONNECTING CONNECTOR BRACKETS

